

-FUJIOH-

吸油烟机
使用说明书

FR-LW2490V

使用本产品前，
请仔细阅读本说明书。

-FUJIOH-

Cooker Hood
Instruction Manual

FR-LW2490V

Please read this manual carefully
before using this appliance.

目 录

警告	2
注意	2
安全警告	3
包装清单	4
产品结构示意图	4
外形尺寸	5
安装指南	5
控制面板操作	11
故障排除	12
维护	12
电气原理图	13
规格	14

Contents

Warning	2
Caution	2
Safety warning	3
Packing list	4
Product structure schematic	4
Outline dimension	5
Installation guide	5
Control panel operation	11
Troubleshooting	12
Maintenance	13
Electrical schematic diagram	14
Specifications	14

警告

- 本电器不适用于体力、感官或心智能力欠缺或缺乏经验和知识的人（包括儿童）使用，除非他们得到对其安全负责的人员的监督或指导，可确保安全使用此电器。儿童不得玩耍本电器。清洁和维护不得由儿童在缺少监督的情况下进行。如果电源线损坏，必须由制造商、其服务代理或类似的合格专业人士进行更换，以避免危险。
- 当吸油烟机与燃烧气体或其他燃料的设备同时使用时，室内应足够通风。
- 请勿使用腐蚀性清洁剂进行清洗。设备的正常运行取决于定期维护。
- 为保护主体不受长时间积累的污垢腐蚀，吸油烟机应每两个月用热水加无腐蚀性的清洁剂进行清洗。
- 如果不按照说明书实施清洁，将产生火灾风险。
- 切勿在吸油烟机下方点火。
- 烟气不得排放至用于排放其他废气的烟道，例如烧气或其他燃料的设备所产生的废气。
- 当吸油烟机位于灶具正上方时，灶具最顶部（如煤气灶）和吸油烟机最低部分之间的最小距离至少应为350毫米。如果灶具说明书中规定了更大的距离，则必须予以考虑
- 必须遵守排气相关的规定。

注意

- 使用灶具时可接触部件温度将升高。
- 本吸油烟机为外排式吸油烟机，吸油烟机抽出的气体不应排放到热烟气中，用于排放燃烧燃气或其他燃料产生的烟气。
- 如果吸油烟机安装在燃气灶上方，则从机身底部到焦平面的距离至少为350毫米，如果燃气灶的安装说明提供了更大的安装距离，则必须予以考虑。严禁未经授权改装产品，不得自行更换或改装电源线。
- 请勿将吸油烟机安装在易燃材料的墙壁上。
- 请勿将吸油烟机安装在固体燃料灶的顶部。
- 在墙上钻孔时，应避免将电线嵌入墙内，以免触电危险。
- 吸油烟机应使用专用电源插座，专用电源插座应可靠接地（产品必须使用

Warning

- 1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are supervised or instructed on how to use the appliance by someone responsible for their safety.
- 2. Children must not play with the appliance.
- 3. Cleaning and user maintenance should not be performed by children without supervision.
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- There must be adequate ventilation in the room when the cooker hood is used simultaneously with appliances that burn gas or other fuels.
- Do not use corrosive detergents for cleaning. Regular maintenance is necessary for the unit's proper operation.
- To protect the main body from corrosion caused by the long-term accumulation of dirt, clean the cooker hood every two months using hot water and a non-corrosive detergent.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not use an open flame under the cooker hood.
- The air must not be vented into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance between the top most point of a cooking appliance, such as a gas hob, and the lower part of the cooker hood, when installed directly above the appliance, must be at least 300 mm. If a greater distance is specified in the manual of the cooking appliance, it must be taken into account.
- Regulations regarding air discharge must be followed.

Caution

- Accessible parts may become hot during use with cooking appliances.
- This cooker hood is of the external exhaust type. The air from the hood should not be vented into the flue gas used for expelling smoke from burning gas or other fuels.
- If the cooker hood is installed above a gas hob, the distance from the bottom of the hood body to the cooking surface should be at least 300 mm, unless the installation instructions for the gas hob specify a greater distance.
- Modifying the product without authorization is strictly prohibited, and the power cord must not be replaced or modified independently.
- Do not install the cooker hood on a wall made of flammable material.
- Do not install the cooker hood directly above a gas hob that uses solid fuel. When drilling holes in the wall, avoid electrical wires embedded in the wall to prevent the risk of electric shock.
- A separate power socket rated for the cooker hood must be used, and it should be securely grounded. The product requires a minimum rating of 10A at 220V or above.
- The wall must have sufficient supporting strength for the installation of the cooker hood. For hollow core walls, the thickness should be greater than 30mm, while concrete walls can be directly drilled and installed. Ensure the product is securely mounted on the wall.
- The cooker hood may have sharp edges. Wear protective gloves when installing or cleaning it.
- If your kitchen is undergoing renovation or construction work, do not expose the cooker hood to building materials, dust, paint, coatings, or their volatile gases, as they can cause corrosion and loss of luster on the hood surface. Please install the cooker hood after completing the decoration.

10A、220~V 或以上的插座)。

- 墙壁应具有足够支撑强度，以便安装吸油烟机。墙体空心应大于 30 毫米，可以直接在混凝土墙上打孔安装。产品必须牢固地安装在墙上。
- 吸油烟机可能有锐边。在安装或清洁吸油烟机时，请戴上防护手套。
- 如果您的厨房正在装修，请勿使用暴露在外的吸油烟机，因为建材、灰尘、油漆、涂料及其挥发性气体会对吸油烟机表面造成腐蚀并使其失去光泽，请在装修完后安装吸油烟机。

安全警告

- 幼儿或体弱者不得在无人监管时使用本电器。
- 应监督幼儿，确保他们不会将本电器作为玩具玩耍。
- 将电源线插到有接地连续性终端的电源插座。
- 该吸油烟机仅供家庭使用，不适用于烧烤、烤肉店和其他商业用途。
- 应按照说明定期清洗吸油烟机及其过滤器。
- 切勿使用明火，勿使火卷入本电器下方。
- 吸油烟机运行时，请确保室内良好通风。
- 清洁或维护吸油烟机前，请确保电源插头从插座上断开或关闭断路器。
- 如果电源线损坏，必须由制造商、其服务代理或类似的合格专业人士进行更换，以避免危险。更换的电源线应由制造商或销售商提供。
- 如果不按照说明实施清洁，将产生火灾风险。
- 如连接导线损坏，请咨询制造商、售后服务人员或其他合格的技术人员。
- 请按照说明使用产品，以避免任何火灾危险。
- 不得将废气引入用于排出烧气设备所产生烟气的烟道或烟囱。
- 请遵循当地适用于外部空气疏散的法律。

Safety warning


- This appliance is not intended for use by young children or individuals with physical limitations without supervision.
- Children should be supervised to ensure they do not play with the appliance.
- Plug the power cord into a socket outlet with an earthing continuity terminal.
- This cooker hood is intended for home use only and is not suitable for barbecue, roast shops, or other commercial purposes.
- The cooker hood and filter should be cleaned regularly as per the instructions.
- Do not use an open flame or allow flames to go beneath the appliance.
- Please maintain adequate ventilation in the room while the cooker hood is in operation.
- Before cleaning or maintaining the appliance, ensure that the power plug is disconnected from the socket or that the breaker is turned off.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards. The power cord should be provided by the manufacturer or its authorized seller.
- Failure to clean according to the instructions may pose a fire risk.
- If the connecting wire is damaged, please contact the manufacturer, its service agent, or other similarly qualified technician.
- Use the product according to the instructions to avoid any hazards.
- The exhaust air must not be directed into a smoke flue or chimney used for ventilating fumes from appliances such as gas burners.
- Follow the local laws applicable for external air ventilation.

包装清单

随产品包装箱有以下附件，开箱后请清点齐全，若不齐全，请与客户服务中心或经销商联系。

序号	名称	数量
1	主机	1台
2	整机挂板	1个
3	排气口	1只
4	排气管	1根
5	M8塑料膨胀管	6只
6	螺钉ST5.0×60	6只
7	螺钉M4×10	2只
8	使用说明书	1本
9	整机压板	1只
10	油杯	1只
11	上装饰罩固定支架	1只
12	上装饰罩	1只
13	下装饰罩	1只

产品结构示意图

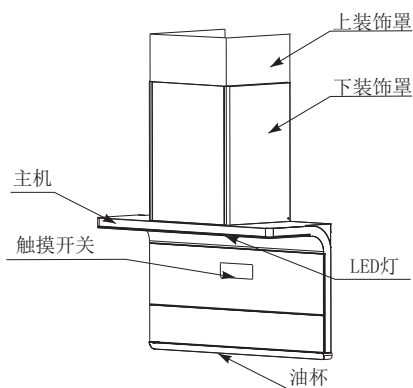


Packing list


The following product components are attached to the product package. Please check them upon opening. If any components are missing, please contact the service center or your dealer.

No.	Name	Quantity
1	Main Unit	1 pcs
2	Hanging Bracket	1 pcs
3	Exhaust Outlet	1 pcs
4	Flexible Tube Duct	1 pcs
5	M8 Plastic Expansion Pipe	7 pcs
6	Screws ST 5.0X60	7 pcs
7	Screws M4X10	2 pcs
8	Instruction Manual	1 pcs
9	Pressing Plate	1 pcs
10	Oil Tray	1 pcs
11	Slide Duct Cover Fixing Bracket	1 pcs
12	Slide Duct Cover	1 pcs
13	Duct Cover	1 pcs

Product structure schematic

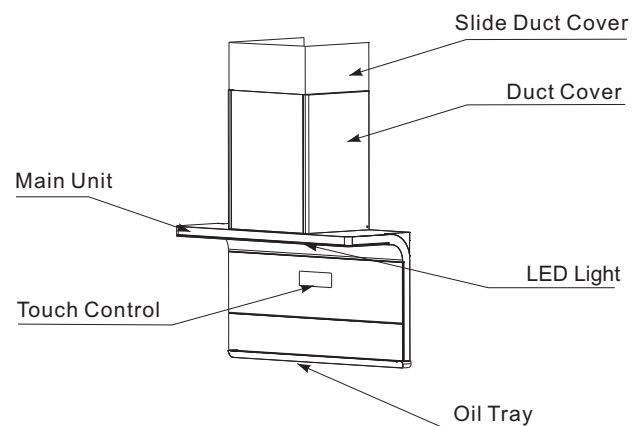

外形尺寸

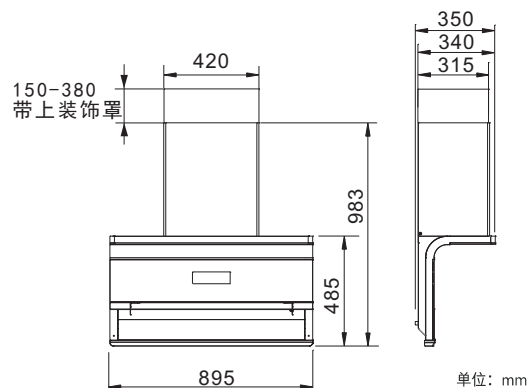


单位: mm

安装指南

1、确定位置 (单位: 毫米)

油烟机应水平安装在灶具上方。安装图如下。

单位: mm

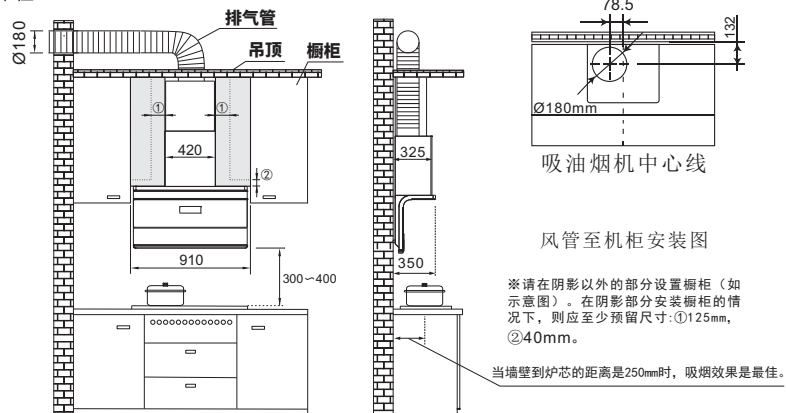

天花板处的排气管开口尺寸示意图


吸油烟机中心线

风管至机柜安装图

※请在阴影以外的部分设置橱柜 (如示意图)。在阴影部分安装橱柜的情况下, 则应至少预留尺寸: ①125mm, ②40mm。

当墙壁到炉芯的距离是250mm时, 吸烟效果是最佳。

Outline dimension

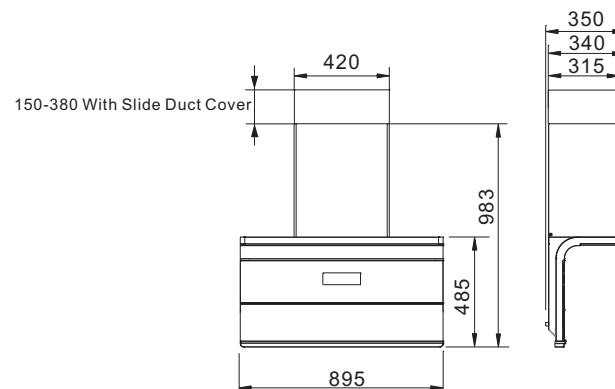

Unit: mm

Installation guide

To determine the location (unit: mm)

The cooker hood should be installed horizontally above the cooking appliance. Refer to the installation diagram below:

Unit: mm

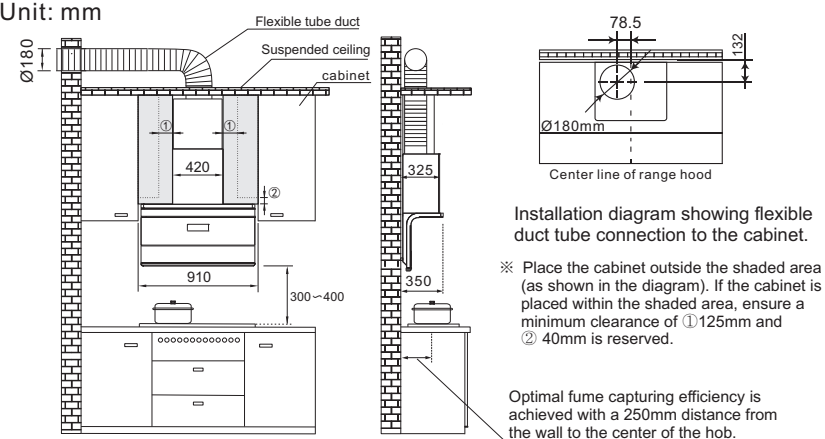


Diagram showing the opening of flexible tube duct in the ceiling.

Installation diagram showing flexible duct tube connection to the cabinet.

※ Place the cabinet outside the shaded area (as shown in the diagram). If the cabinet is placed within the shaded area, ensure a minimum clearance of ①125mm and ②40mm is reserved.


Optimal fume capturing efficiency is achieved with a 250mm distance from the wall to the center of the hob.

安装注意事项

- 吸油烟机在安装后，应保持左右水平。
- 应避免在吸油烟机附近过多开窗和空气对流，否则会影响吸油烟机的工作效率。
- 排气管要求。
- 排气管的出口不能太长。

2. 油烟机安装(单位：毫米)

① 按下图指示标记机体挂钩安装位置。

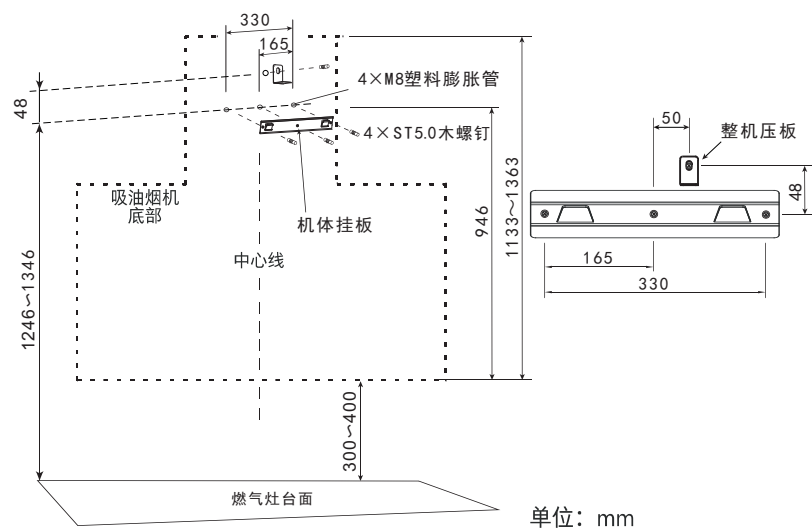


Installation precautions

- After installing the cooker hood, ensure that both ends are aligned evenly.
- Avoid excessive breezes and air currents near the cooker hood, as they may affect its efficiency.
- The requirements for the exhaust pipe should be fulfilled.
- The exhaust pipe outlet should not be excessively long.


Cooker hood installation(Unit: mm)

1. Mark the mounting position of the hanging bracket according to the instructions provided below:

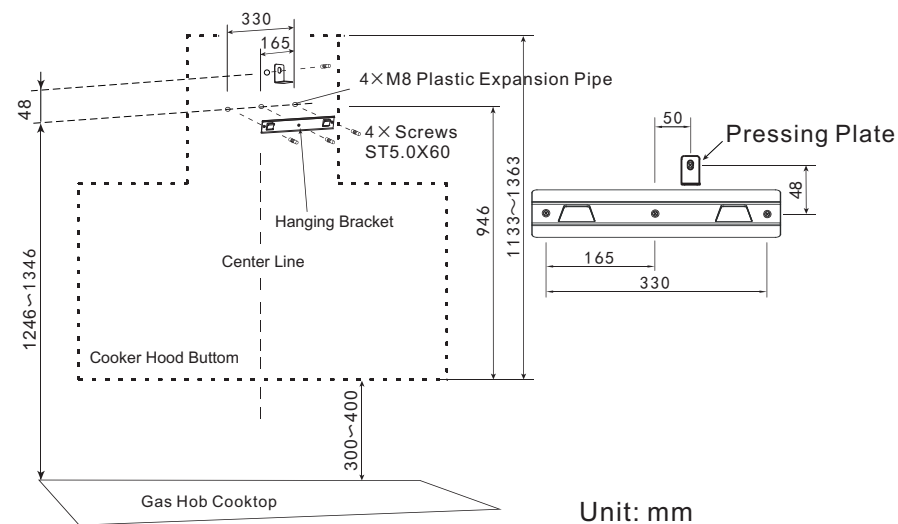


- ② 对所标记的4个螺丝孔位置进行钻孔，孔直径为 $\phi 8\text{mm}$ ，深度为70mm，然后插入膨胀管。

单位：mm


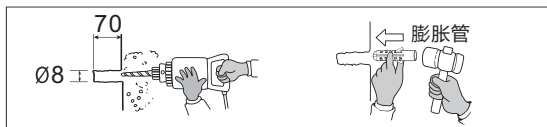


- ③ 用3个ST5.0×60木螺钉固定好机体挂板。

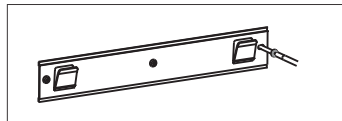


- ④ 上装饰罩固定支架的螺丝孔位置距离橱柜顶部48mm。在墙上标记2个螺丝的位置，然后钻孔直径为 $\phi 8\text{mm}$ ，深度为70mm，最后插入膨胀管。

上装饰罩固定支架

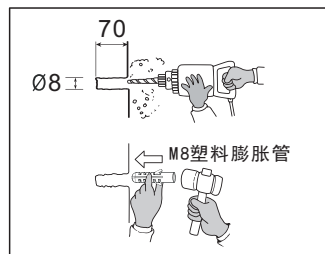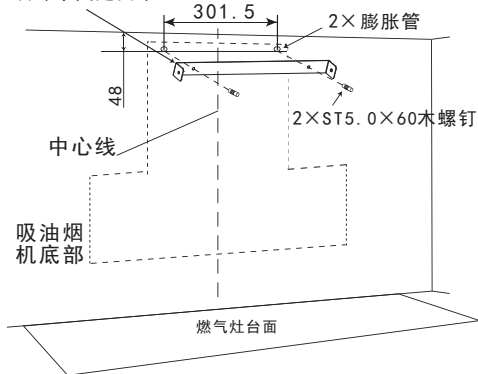


- ⑤ 用2个ST5.0×60木螺丝将上装饰罩固定支架固定在墙壁上。

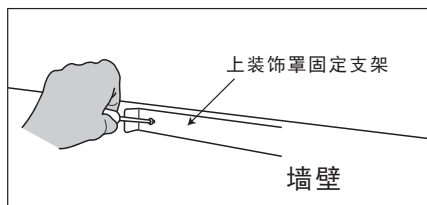


- ⑥ 将机体安装在墙壁上，机体与墙壁应倾斜 1° 或 2° ，以便机体挂板的挂钩完全插入并挂到机体槽中，挂上整机后请视检有否水平，以及确保机体完全贴平墙壁。

2. Drill holes with a diameter of 8mm and a depth of 70mm at the 4 marked screw positions, then insert the plastic expansion plugs into the holes.


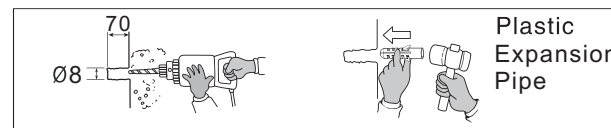


3. First fix the hanging bracket with 4 pcs ST5x60 screws.

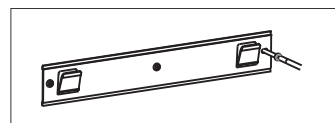


4. Mark the location of the 2 screws on the wall, ensuring they are positioned 48mm from the top of the cabinet. Drill holes with a diameter of 8mm and a depth of 70mm, then insert the expansion plugs.



Slide Duct Cover Fixing Bracket

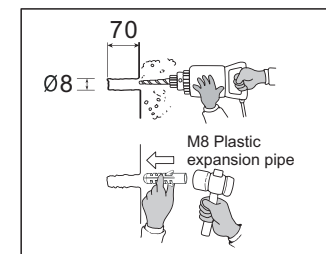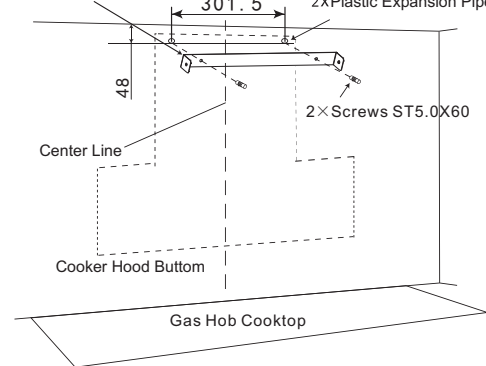


5. Use 2 ST5x60 screws to install the slide duct cover fixing bracket to the wall.

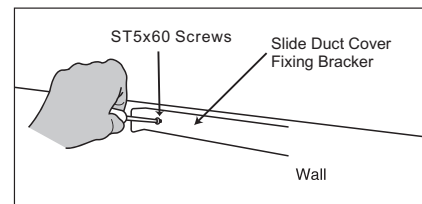


在烟机上部用另1个ST5.0×60木螺丝固定好整机压板，定位限制烟机运行时因振动向上移动甚至脱开挂钩。

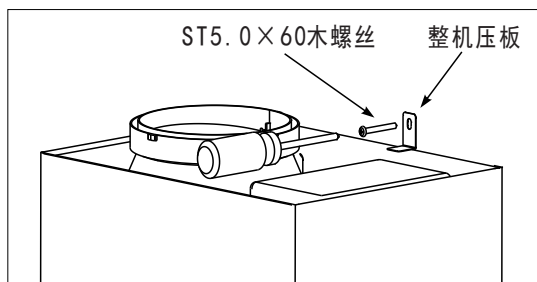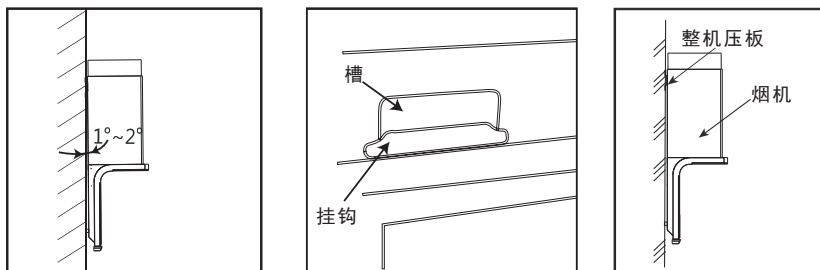

⑦ 将密封垫放置在排气出口处（可能需要提前先将螺丝卸掉），如下图所示。请确保密封垫正确地对齐。此步骤视安装空间，亦可提前准备。

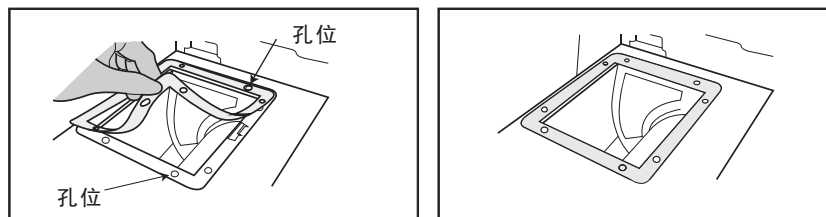


⑧ 将排气管插入排气口，排气管的固定端与排气口之间有4个卡扣，相互对准后顺时针旋转扣紧。

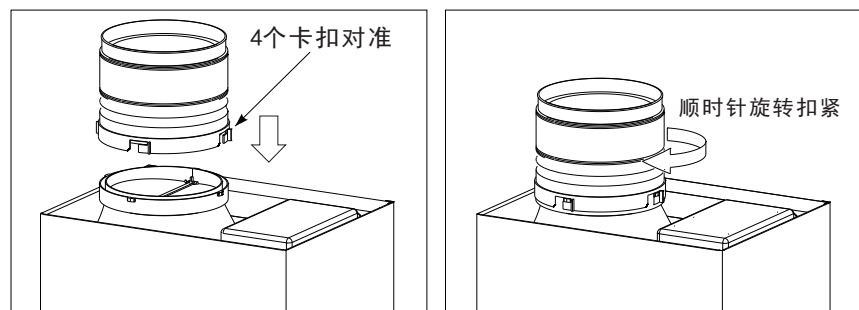


6. Install the main unit on the wall. Ensure that both the main unit and the wall are tilted 1 to 2 degree, so that the hook of the main unit hanging bracket can be fully inserted and secured into the slot. After hanging the cooker hood, verify its horizontal alignment and ensure the main unit is completely flush with the wall.


Use another ST5×60 screw to secure the pressure plate to the upper part of the smoke deflector. This helps to locate and secure the smoke deflector, preventing it from dislodging or moving upwards during operation and maintenance, thus avoiding damage or dropping.

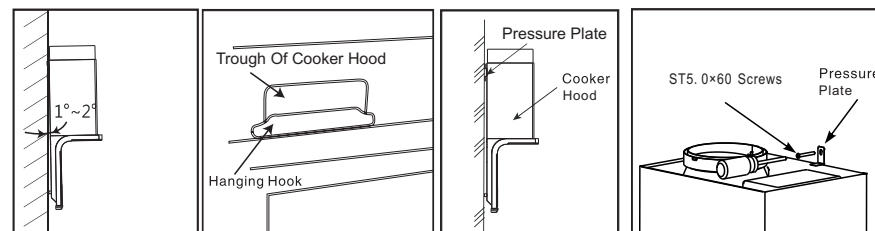


7. Place gasket at exhaust outlet (may need to remove screws in advance) as shown below. Make sure the gaskets are aligned correctly. This step can be prepared in advance depending on the installation space

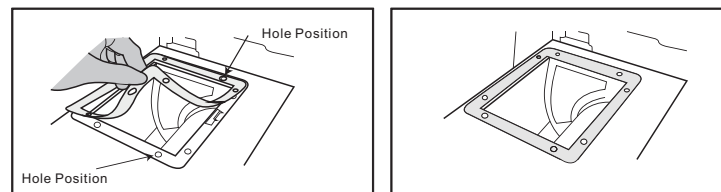


8. Insert the flexible tube duct into the exhaust Outlet. There are four clasps between the fixed end of the flexible tube duct and the exhaust port. Align with each other and fasten the clasps clockwise

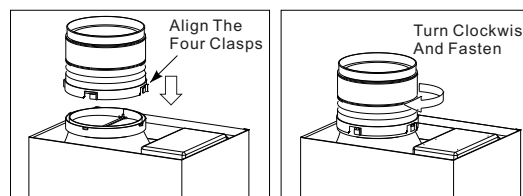

- ⑨ 将排气管适当拉伸并引至户外，排气管转弯尽量少，最好仅转弯一次。转弯半径尽量大而平缓，避免转弯半径小而急。如果用户自己家里的墙上有排气的止逆阀，则可以将排气管连接到止逆阀上后，用排气管配件内自带的47.5mm×1000mm的铝箔胶带纸密封。如果用户自己家里没有排气的止逆阀，那么需要用户自行想办法密封，户外墙壁的排气口，建议略低于室内墙壁的开孔，以防油污回流。

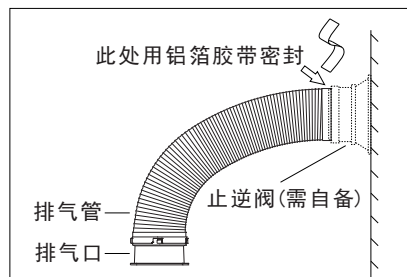

- ⑩ 按图示使用胶带固定电源线。

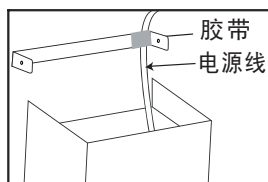

警告!

禁止将电源线接触伸缩管表面，否则可能导致火灾或触电。

注意!


请确保拧紧安装螺丝，否则可能导致油烟泄漏。

出风管适当拉伸并引至户外，风管折弯尽量少（一般一个），弯曲角度以大于120度为宜，避免直角折弯；


出风口端须略低，以防油污回流。

安装前请先撕掉机器保护膜，撕前先拧掉装饰罩后面跟侧面的4颗螺丝，再撕保护膜。

9. Properly extend the exhaust pipe and direct it outdoors, minimizing the number of turns, preferably only once. Ensure the turning radius is large and gentle, avoiding tight, sharp bends. If your home has an existing check valve on the wall, connect the exhaust pipe to the check valve and seal it using the 47.5mm×100mm aluminum foil tape provided with the exhaust pipe fittings. If there is no check valve in the home, find a way to seal the outdoor exhaust port slightly below the indoor wall opening to prevent oil back flow.

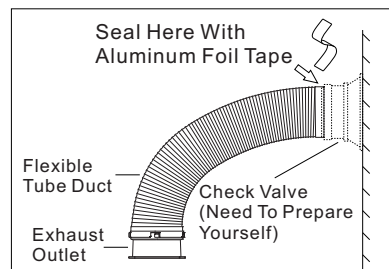

10. Use tape to fix the power cable as shown.

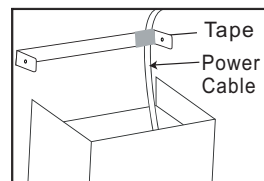


Warning

Do not run the power cable along the surface of the extended duct to avoid the risk of fire or electric shock.

Caution


Ensure that the installation screws are tightened; otherwise, fumes may leak. Properly control and extend the extended duct to lead outdoors with minimal bending (ideally one bend) and ensure the bending angle is greater than 120 degrees to avoid sharp angles. The outlet end should be positioned slightly lower to prevent oil reflux.

- ⑪ 安装上装饰罩，请从吸油烟机机身上拉起上装饰罩，用M4×10螺丝将上装饰罩与上装饰罩固定支架进行固定，固定时请不要让螺丝触碰到电源线，如下图所示。

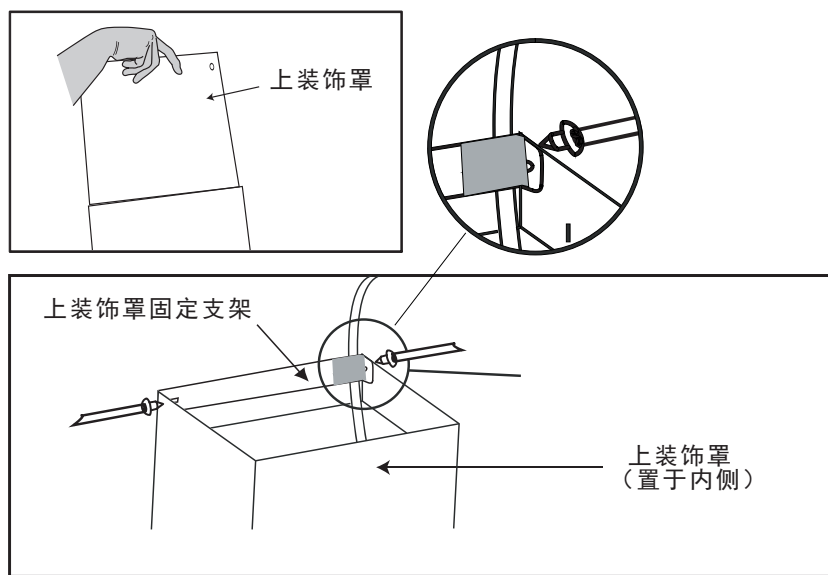


Please remove the protective film before installation. Unscrew the four screws on the back and side of duct cover before removing the protective film.


11. To install the slide duct cover, lift it up from the main unit of the cooker hood and secure it to the bracket using the provided fixing screw set. Ensure the screws do not come into contact with the power cord during installation.

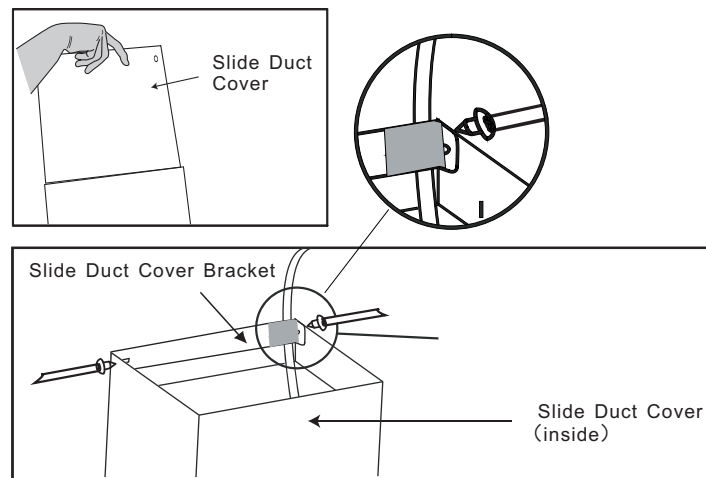

- ⑫ 将油杯组件装入卡槽，请推到底。

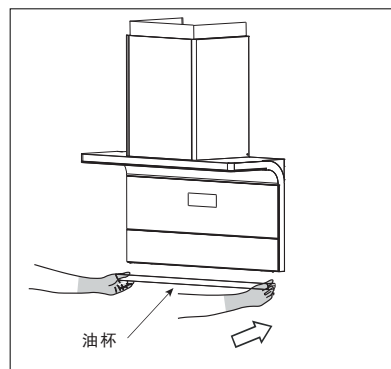

12. Insert the oil tray into the slot and push it all the way to the rear end of the product.

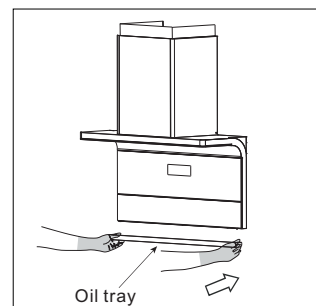

控制面板操作



电源/延时键/时间设置☼:

首次通电，“☼”键暗亮为通电状态，通电状态下，短按“☼”键进入待机状态。在风机开启后短按“☼”键，开启延时关机功能。延时功能开启时，“☼”点亮。

待机状态下长按“☼”键，进入时间设置模式，此时时间区域小时部分闪烁显示；再短按一次“☼”键，进入分钟设置状态，再短按一次“☼”键退出时间设置模式。在时钟或分钟设置状态下，短按“☼”键可向上调节数值，短按“☼”键可向下调节数值。每短按一次，时间调整1；若长按则连续调整；小时设置范围：00~23间循环调整；分钟设置范围：00~59间循环调整。无任何操作，3秒左右自动退出时间设置模式。时针设置时“☼、☼、☼”闪烁。

风速键☼:

待机状态下短按“☼”键，开启风机档位功能，进入F1档运行，短按“☼”键可循环调整风速（顺序F1-F2-F3-Fb-F1），长按“☼”键直接关闭风机或短按“☼”键进入3分钟风机延时功能。Fb档为爆炒档，启动爆炒档后，爆炒1分钟结束后自动进入F3档。F1档“>”点亮，F2档“>>”点亮，F3档“>>>”点亮，Fb档“>、>>、>>>”一起点亮。

热清洗键☼:

待机状态下短按“☼”键，可以开启或关闭热清洗功能。热清洗功能时间为30分钟，热清洗开启时，烟机翻板打开。过程设定10分钟加热-慢档运行5分钟-10分钟加热-慢档运行5分钟，结束后进入关机状态。长按3秒也可以退出热清洗状态。热清洗功能开启，“☼”点亮。

照明/手势开关键☼:

照明功能为独立控制。任意状态短按“☼”键，可以开启或关闭照明功能。在通电状态下，长按“☼”键可开启或关闭手势功能，首次上电，手势功能默认为开启；照明开启时，“☼”点亮。

手势功能:

首次从左往右挥手，风机F2档开启、照明开启。连续从左往右挥手，风机循环调整风速（顺序F2-F3-Fb-F1-F2）。风机、照明开启状态，首次从右往左挥手，风机开启3分钟延时功能，再次从右往左挥手，风机直接关闭、照明关闭。手势功能对热清洗功能无效。

Control panel operation



Power/Timer/Clock Setting:☼

Power:☼

When the device is powered on for the first time, the “☼” key will dimly light up, indicating that the power is on. After the power is on, press the “☼” key shortly to enter standby mode.

Timer: ☼

After the fan starts running, shortly press the “☼” key to activate the 3-minute delayed shutdown timer. While the timer is active, the “☼” indicator will light up.

Clock Setting:☼

In standby mode, long press and hold the “☼” key to activate clock setting mode. The hour segment of the time display will blink once the clock setting mode is activated. Shortly press the “☼” key again to switch to minute setting mode, and press the “☼” key once more to exit time setting mode. While in hour or minute setting mode, press the “☼” key to increase the value, and press the “☼” key to decrease it. Each short press adjusts the time by 1 unit, and holding down the key allows continuous adjustment. The hour setting ranges from 00 to 23 in a cycle, and the minute setting ranges from 00 to 59. If there is no operation for approximately 3 seconds, the clock setting mode will automatically exit. During clock setting, the “☼、☼、☼” indicators blink to indicate the mode.

Air flow :☼

In standby mode, press “☼” to activate the fan operation. the operation starts at F1 speed. Press “☼” to adjust the fan speed (sequence: F1→F2→F3→Fb→F1). Press “☼” to shut down the fan directly, or press “☼” shortly to activate the 3-minute timer function. When Fb (boost mode) is activated, it lasts for 1 minute. Upon completion, it automatically switches to F3. F1: “>” light, F2: “>>” light, F3: “>>>” light, Fb: “>、>>、>>>” lights together.

Heat Clean:☼

In standby mode, briefly press “☼” to enable or disable the heat clean function. The heat clean cycle lasts for 30 minutes. When the heat clean is activated, the cooker hood flap opens. The heat cleaning function is enabled, and the “☼” indicator lights up.

故障排除

故障	可能原因	解决方案
灯亮, 电机不运作	风速开关关闭	选择风扇开关位置
	风速开关失败	联系服务中心
	电机故障	联系服务中心
灯不亮, 电机不运作	保险丝熔断	联系服务中心
	电源线松动或断开	联系服务中心
漏油	单向阀和出口密封不严	联系服务中心
	烟囱和盖子的连接处泄漏	联系服务中心
灯不亮	灯泡损坏或故障	联系服务中心
吸力不足	吸油烟机与炉具距离过远	联系服务中心
吸油烟机倾斜	固定螺丝不够紧	联系服务中心



注意:

对该设备的任何电气保养都必须符合当地、州和联邦的法律。在进行上述任何操作之前, 如有任何疑问, 请联系服务中心。打开设备时, 务必将设备与电源断开。

Lighting/Gesture Control Setting: ✨

Lighting: ✨

The lighting is independently controlled. Press the “✨” in any state to turn the LED lamp on or off.

Gesture Control Setting:

Upon first power-on, the gesture function is enabled by default. To enable or disable gesture control, press and hold the “✨” key.

Gesture Control:

- Wave the hand from left to right for the first time to turn on lighting and fan operation at F2
- Continuously wave from left to right to change the fan speed in the sequence of F2-F3-Fb-F1-F2.
- If both the fan and lighting are on, wave from right to left for the first time to activate a 3-minute delay timer function.
- Wave from right to left again to turn off the fan directly and switch off the lighting. The gesture function does not apply to the heat cleaning function.

Troubleshooting

Fault	Possible Cause	Solution
The light turns on, but the motor does not operate.	Fan switch has been turned off.	Switch on the fan operation.
	Fan switch has failed.	Contact service center.
	Motor has failed.	Contact service center.
Light does not work, motor does not work.	House fuses have blown.	Contact service center.
	Mains power cable is loose or disconnected.	Contact service center.
Oil leakage.	One way valve and the outlet are not tightly sealed.	Contact service center.
	Leakage from the connection of chimney and cover.	Contact service center.
Lights does not work.	Broken or faulty LED.	Contact service center.
Insufficient suction.	The distance between the cooker hood and the hob top is too far.	Contact service center.
The Cooker hood is tilted.	The fixing screw is not tight enough.	Contact service center.




NOTE:

Any electrical repairs to this appliance must comply with local, state, and federal laws. Please contact the service center if you have any doubts before attempting any of the above actions. Always disconnect the unit from the power source before opening it.

维护

日常清洁

为达到最佳操作性能和更长的使用寿命，本产品必须经常进行清洁和保养。建议使用湿布清洁所有表面（可使用中性清洁剂），以保持本产品的外观和卫生。

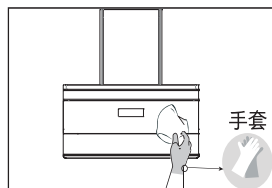


提示事项

1. 自动清洁功能只是对吸油烟机内部叶轮进行高温加热清洁。
2. 清洗油网时，请勿使用强碱性洗涤剂，建议至少每月清洗一次滤油网。

油杯清洁

当油杯中的油杯窗口充满油时，请及时清洁。油杯拆卸程序如下：用双手握住油杯下部，水平取下油杯；清洁后，按相反顺序安装油杯。（油杯较长，拆油杯时请拿稳，以免油溢出。）

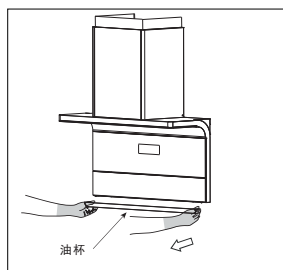


每月清洁

用湿布和中性清洁剂定期清洁吸油烟机表面。清洁前先拔掉电源线插头。

Maintenance

Daily cleaning

This product must be cleaned and maintained frequently for optimal operating performance and longer service life.

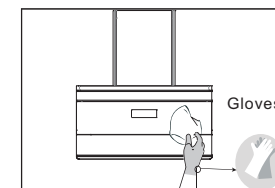


It is recommended to clean all surfaces with a wet cloth (neutral detergent may be used) to maintain the appearance and hygiene of the product.

Point

1. The heat clean function only cleans the oil of the casing inside the cooker hood, and does not directly clean the grease filter.
2. The automatic cleaning function only cleans the inner impeller of the cooker hood by heating it at high temperature.


Oil tray cleaning

When the oil tray window in the oil tray is filled with oil, please clean it in time. The oil tray disassembly procedure is as follows: hold the lower part of the oil tray with both hands, and remove the oil tray horizontally; After cleaning, install the oil tray in reverse order. (Because the oil tray is long, please hold it firmly when the oil tray is removed so as not to spill the oil.)

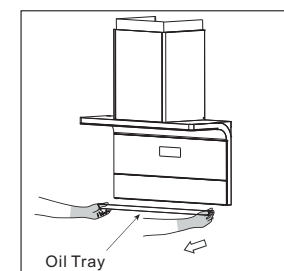

电器原理图

220-240V~/50Hz

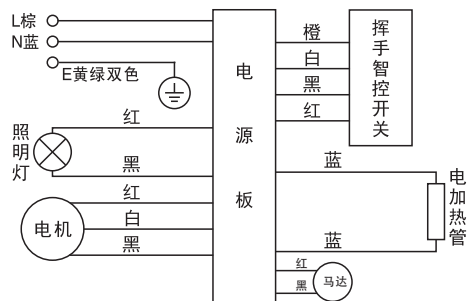

规格

额定电压 (v)	风速	功率 (w)	转速 (m ³ /h)	噪声 (dB(A))
220	爆炒	159	1200	52
	F3	93	1035	48
	F2	72	870	45
	F1	50	740	40
230	爆炒	160	1200	52
	F3	95	1040	48
	F2	74	865	45
	F1	51	740	41
240	爆炒	161	1200	52
	F3	96	1040	48
	F2	75	870	45
	F1	52	740	41

LED 灯信息


长度×宽度×厚度	最大功率	电压	图片	灯头
853×152×5 (mm)	8W	12V		--

Monthly cleaning

Periodically clean the surface of the cooker hood with a damp cloth and neutral detergent. Unplug the power cable before cleaning.

Electrical schematic diagram


220-240V~/50Hz

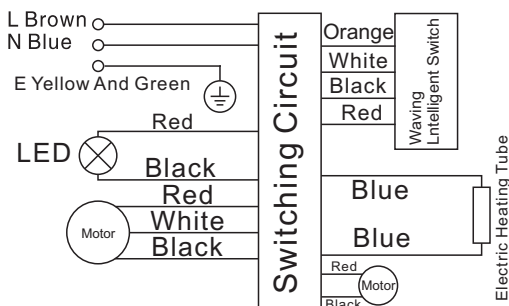

Specifications

Rated Voltage (v)	Speed	Power Consumption (w)	Air flow (m ³ /h)	Sound (dB)
220	Boost	159	1200	52
	F3	93	1035	48
	F2	72	870	45
	F1	50	740	40
230	Boost	160	1200	52
	F3	95	1040	48
	F2	74	865	45
	F1	51	740	41
240	Boost	161	1200	52
	F3	96	1040	48
	F2	75	870	45
	F1	52	740	41

LED light information

Square / Dimension:	Max Power	Voltage	Picture	Lamp Cap
853×152×5 (mm)	8W	12V		--

全球网站

<https://global.fujioh.com>

FUJIOH INTERNATIONAL TRADING PTE. LTD.

东南亚区域总部

3014A Ubi Road 1 #06-04, Singapore 408703

Tel:(65)6286 3286 Fax:(65)6285 3285

E-mail:fit@fujioh.com.sg

FUJIOH MARKETING MALAYSIA SDN. BHD.

23, Jalan Serendah 26/39, Section 26, 40400

Shah Alam, Selangor, Malaysia

Tel:(60)35103 6826

E-mail:enquiry@fujioh.my

2024年第1版



全球网站

Global Website

<https://global.fujioh.com>

FUJIOH INTERNATIONAL TRADING PTE. LTD.

Southeast Asia Regional Headquarters

3014A Ubi Road 1 #06-04, Singapore 408703

Tel:(65)6286 3286 Fax:(65)6285 3285

E-mail:fit@fujioh.com.sg

FUJIOH MARKETING MALAYSIA SDN. BHD.

23, Jalan Serendah 26/39, Section 26, 40400

Shah Alam, Selangor, Malaysia

Tel:(60)35103 6826

E-mail:enquiry@fujioh.my

Rev1 2024



Website